



Reverse Gate Bellcrank Linkage Adjustment

With the controls in forward, adjust the shift cable or rod to bring the linkage on center line as shown. This prevents wave action from moving the gate toward reverse. Adjust the threaded rod end in the bellcrank swivel so that the gate is pressed against the rubber pad. This takes the rattle out of the system to extend bushing life.